

# GFB Deceptor Pro II

## Hyundai I30N/Veloster N BOV Kit T9510

**WARNING:** If you are not experienced in automotive wiring, GFB recommends that this installation is carried out by a professional. Irreversible damage could occur if wired incorrectly, which is not covered by warranty.

Do not manually rotate the internal sleeve on the valve, always apply power and use the controller to change the venting bias. DO NOT put fingers or foreign objects into the valve's ports. Doing so may result in personal injury or damage to the blow-off valve.

+61 2 9534 0099

sales@gfb.com.au

www.gfb.com.au

facebook.com/GFBturbo


### Installing the Control Box

Connect the red wire to a +12V power supply inside the cabin – make sure this power supply is ignition switched and not permanently powered.

Connect the black wire to ground, most commonly this is a bolt on the chassis.

Find a suitable mounting location for the control box. Ensure both mating surfaces are clean and dry, then secure the control box using the supplied double-sided tape. Press hard and hold for 30 seconds.

At this point it is worth testing the wiring before continuing. Plug the Deceptor Pro II valve cable into the wiring loom as shown, then turn the ignition on. Please read the **Adjusting the Sound** section, then confirm correct operation of the control box and valve before proceeding with the installation.

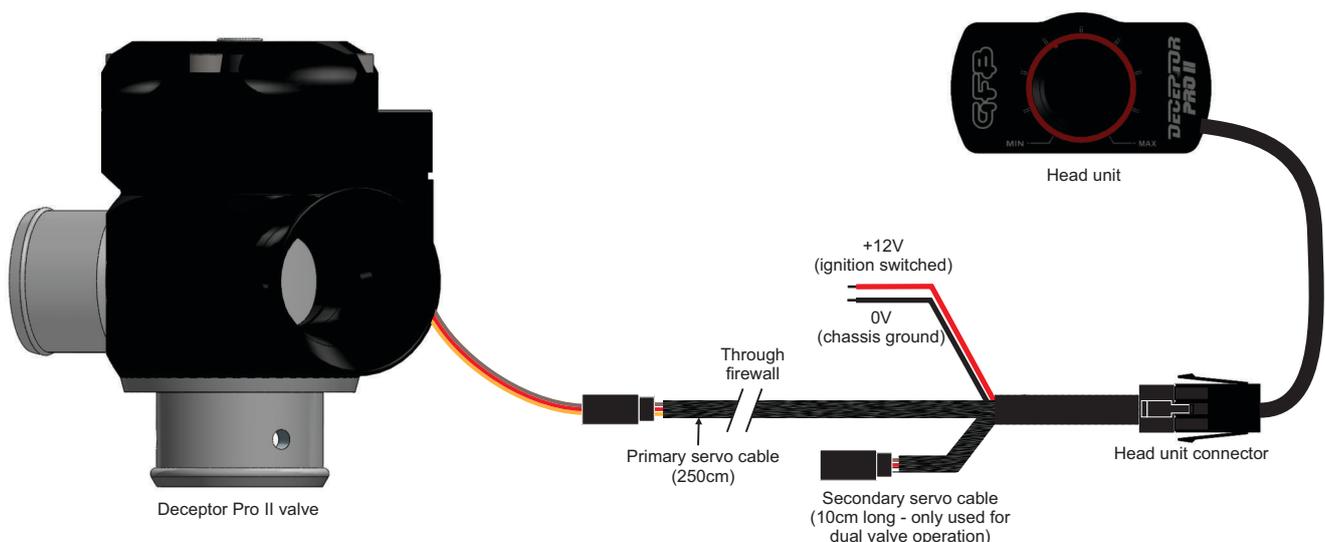


Feed the primary servo cable through the firewall into the engine bay. Ensure that the cable is protected where it passes through the firewall to prevent shorting out.

Now proceed with the blow-off valve installation.

## Installing the Blow-Off Valve

1) Access to the factory diverter valve is made easier with the removal of the airbox. To do this, remove the two plastic clips on the intake (press the centre pin in to release ) , hose clamp () , and the 3 bolts () . Carefully remove it from the car and set aside.

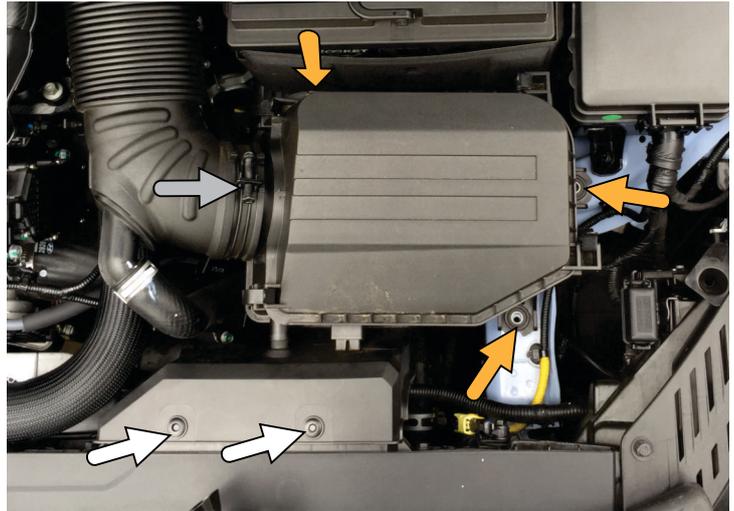


2) Before unbolting the factory valve, it is easiest to first remove the recirc hose while the valve is still solidly mounted (this hose is quite tight and needs some wiggling persuasion). Then remove the factory valve from the car using a 10mm socket for the 4 screws.

3) Ensure the brown o-ring is installed in the groove on the underside of the Deceptor Pro II valve, then insert one of the four supplied mounting screws into the mounting hole on the Deceptor Pro II underneath the electric motor.

4) Install the Deceptor Pro II in the factory location (Respos TMS valve shown opposite, mounting position is the same for the Deceptor Pro), first tightening the single mounting screw underneath the electric motor by hand as much as possible.

5) Insert a second mounting screw on the opposite side of the valve and finger tighten it to keep the valve steady. Use the supplied shortened hex key to fully tighten both screws (). The remaining two screws can now be inserted and tightened.

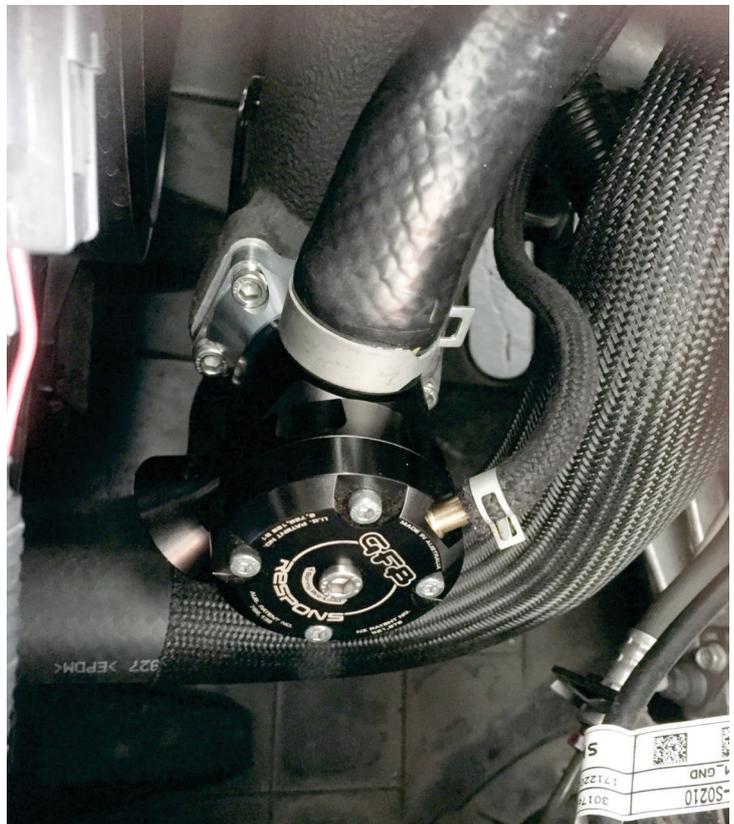

6) Fit the recirc and vacuum hoses onto the Deceptor Pro II, and replace the clamps.

7) Connect the cable from the Deceptor Pro II to the wiring loom, and secure to ensure the loom cannot rub or touch hot parts in the engine bay.

8) Re-install the airbox in the reverse order of removal.

## Adjusting the Spring Pre-Load

The spring pre-load **DOES NOT** need to be adjusted to suit different boost pressure. **All GFB valves will stay shut** under full throttle conditions **regardless** of boost pressure or spring pre-load.


Because Hyundai uses an ECU-controlled solenoid valve to switch the top port of the BOV from boost to vacuum when it requires it to open, the conditions under which the BOV vents are largely determined by the ECU. However, the duration of the sound and how easily it blows off is controlled by the spring pre-load.

The ECU typically triggers the solenoid immediately on throttle lift off (even if the throttle is only slightly lifted), but usually only above a certain RPM and load. Therefore, the Deceptor Pro II may appear to vent at odd times, or at low load it may appear not to vent at all, this is normal and is determined by the ECU.

Since there is no MAF sensor on these cars, the ECU is completely unaffected by atmosphere venting or spring pre-load, and therefore the spring pre-load can simply be set to your preference to control how easily the valve blows off when you lift off the throttle.

The screw in the centre of the Deceptor Pro II cap is the spring adjuster, which requires the supplied 5mm hex key for adjustments. The softest spring setting is achieved when the top of the adjustment screw is 3mm above the head of the valve as shown opposite. Do not set the screw more than 3mm above the head.

Start by setting the venting bias adjustment to full atmosphere (so you can hear the valve venting during setup), then set the spring pre-load screw level with the top of the valve.

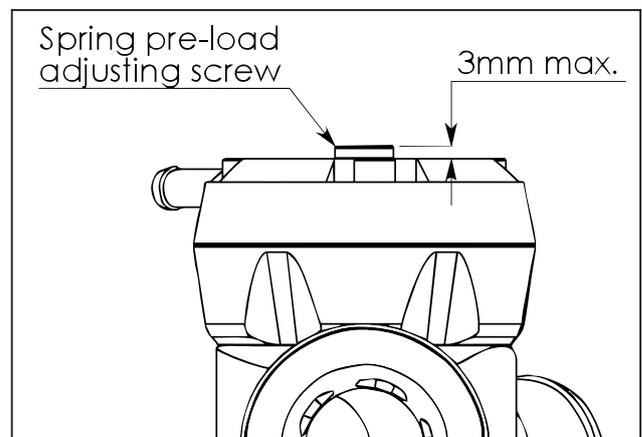

Take the car for a drive, and note how easily the valve vents when you lift off. Making the spring softer will allow the valve to open easier and vent longer, and increasing the pre-load means you will need to drive the car harder (i.e. more boost) before you start to hear the valve venting, and the blow-off sound will be shorter in duration.

## Adjusting the Sound

The control box dial controls the patented venting bias adjustment system of the Deceptor Pro II BOVs. Turning the dial fully anti-clockwise sets the valves to 100% recirc for silent operation, full clockwise results in 100% atmosphere venting for maximum sound, and any ratio is possible between these limits.

The control box features a "sleep" mode that dims the dial lighting after approximately 10 seconds. This reduces power consumption and also prevents accidental adjustment of the valve position.



**Push to activate, turn to adjust**

## Adjusting the Sound - Continued

The control box also has a range limiting feature. This can be used to limit the maximum atmosphere-venting bias position of the Deceptor Pro valve. To use this feature, set the dial to the position that you want as your new maximum, then press and hold the dial until the light flashes. Now when you move the dial to the maximum position, the valve will only open as far as the position which you have just set as your new limit.

To reset the range to maximum again, turn the dial fully clockwise, then press and hold the dial.

Do not be afraid to experiment with the spring and sound settings, as the car's air/fuel ratio cannot be affected, nor is it possible to damage the engine or turbo with BOV adjustments.

You can also purchase a whistling trumpet (part # 5702) to change the venting sound to a high-pitch whistle.



## Leak Testing

If you or your tuner pressure test your car's intake system as part of routine maintenance, or to troubleshoot a problem, please note that it is common to detect a false leak from a Deceptor Pro II BOV (or indeed any type of dual-port BOV), which does not necessarily indicate a fault or boost leak. This is due to the test method (even when done "correctly") and is explained in detail in the tech articles and video below:

[www.gfb.com.au/tech/tech-articles/15-smoke-testing-boost-leaks](http://www.gfb.com.au/tech/tech-articles/15-smoke-testing-boost-leaks)  
[www.gfb.com.au/images/tech-articles/GFB\\_DP\\_Diverter%20leak.pdf](http://www.gfb.com.au/images/tech-articles/GFB_DP_Diverter%20leak.pdf)

**WARNING:** GFB recommends that only qualified motor engineers fit this product. This product is intended for racing use only, and it is the owner's responsibility to be aware of the legalities of fitting this product in his or her state/territory regarding noise, emissions and vehicle modifications. GFB products are engineered for best performance, however incorrect use or modification of factory systems may cause damage to or reduce the longevity of the engine/drive-train components.

### **GFB Limited Lifetime Warranty:**

We live in a throw-away society, conditioned by cheap products and built-in obsolescence to expect eventual failure and discard something when it stops working or is superseded. However, pride in workmanship and our commitment to quality means that when we put our name to something, we are also staking our reputation on it.

That is why we back our products with the best Warranty in the business! You should expect a lifetime of use from a well-engineered product, so if your GFB product fails as a result of defective materials or faulty workmanship whilst you remain the original owner, we will repair or replace it (limited only to the repair or replacement of GFB products provided they are used as intended and in accordance with all appropriate warnings and limitations. No other warranty is expressed or implied).

If a fault occurs as a result of usage outside of the terms of the warranty, or you are not the original owner, fear not, we can still help you. You should never need to throw a GFB product away, as spare parts are available and won't cost the earth.